


PERFECT FIT UNIVERSAL

Measuring & Fitting Instructions


Maximum Blind size for Perfect Fit cellular/ pleated blind fitted onto Universal frame: 1400mm width x 2000mm drop. Please refer to Perfect Fit drop charts for roller and Vision® blinds which could be less than 2m.




MEASURING

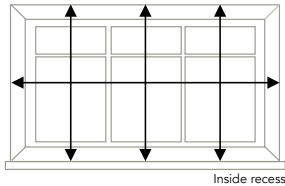

1. For **inside recess fit / side fix blinds**, measure inside width of recess in several places, particularly at the top of the recess and record the smaller width minus 2mm.
2. Measure inside drop of recess in several places and record the smallest drop minus 2mm.
3. You now have the width x drop of the **inside recess size**.

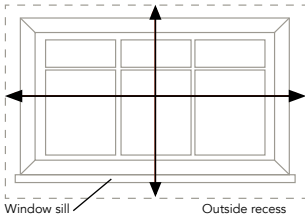


1. For **outside recess fit / face fix blinds**, we suggest the frame should project at least 60mm each side of the recess from the edge of the wall to the outside of the Universal Frame.
2. Measure and record the width and drop using the diagrams below as a guide.

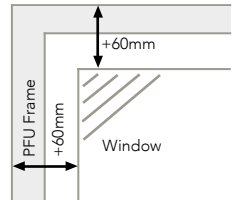

NOTE: All sizes are to the outside of the Universal frame.

1 Outside recess with NO window sill

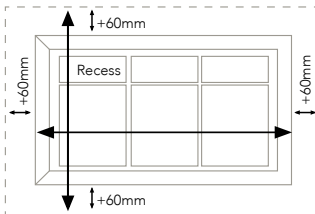


EXAMPLES:

NO WINDOW SILL: recess width is 1200mm and the recess drop is 1000mm

Using diagram **1** Frame size will be 1200mm + 120mm x 1000mm + 120mm = final frame size of 1320mm width x 1120mm drop.

2 Outside recess WITH a window sill

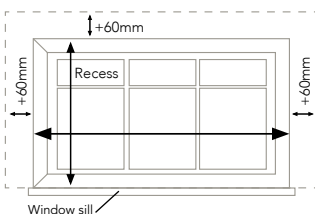

WITH WINDOW SILL: recess width is 1200mm and the recess drop is 1000mm

Using diagram **2** Frame size will be 1200mm + 120mm x 1000mm + 60mm = final frame size of 1320mm width x 1060mm drop.

FITTING - SIDE FIX (INSIDE RECESS)

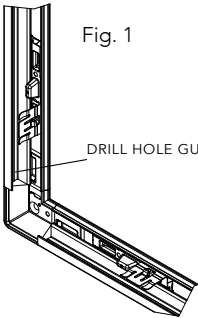


Fig. 1

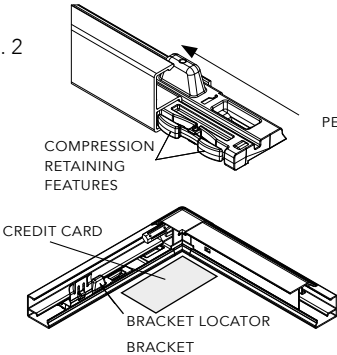


Fig. 2

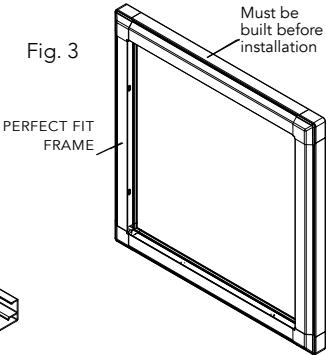



Fig. 3

1. Using the guide lines drill 4mm holes through the side of the frame for fixing (fig. 1).

2. Assemble the Universal frame as per below and fit into recess ensuring the frame is square and level (fig. 4).
3. Using a credit card measure to the highest point inside of the frame and fit the brackets into the bracket locator. Slide to line up with the punch holes in the Perfect Fit frame (fig. 2).


Note: Always use 24mm Perfect Fit brackets.
4. Clip the Perfect Fit frame to the installed universal frame (fig. 3).

Fig. 4

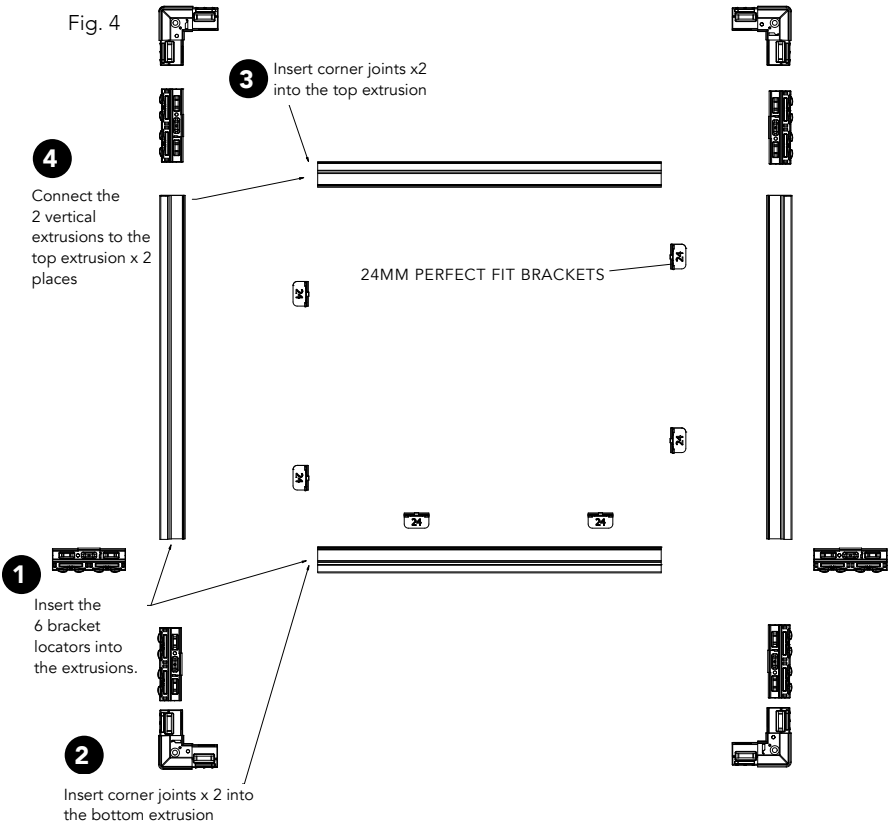


FITTING - FACE FIX (OUTSIDE RECESS)


- 1. Slide bracket locators into the two sides and the bottom of the Perfect Fit Universal frame (fig. 1).

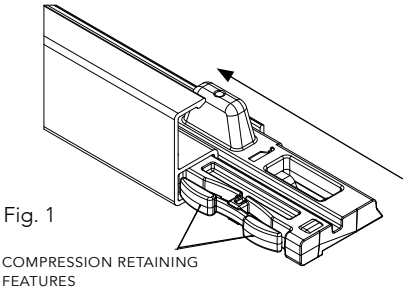

- 2. Slide the two corner joints into the bottom frame section and secure to the wall through the fixing hole in the corner joint, ensuring the frame is square and level (fig. 2).

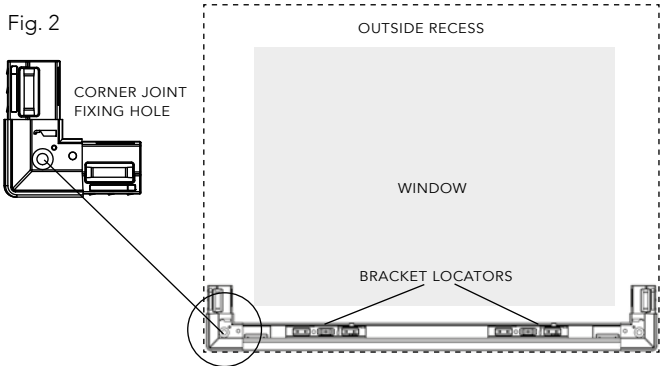


- 3. Assemble the top and side of the frame and push onto the corner joints of the bottom frame section and secure through the remaining holes in corner joint. Additional fixing holes can be drilled through the back of the frame if required (recommended on frames over 750mm). If adding additional fixing holes ensure the bracket locators are positioned away from the screws before adding the fixing screws (fig. 3).

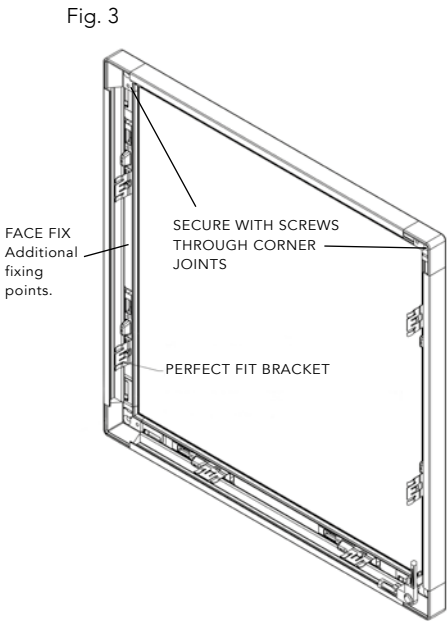


4. Using a credit card measure to the highest point inside of the frame and fit the brackets into the bracket locator. Slide to line up with the punch holes in the Perfect Fit frame (fig. 2).

Note: Always use 24mm Perfect Fit brackets.

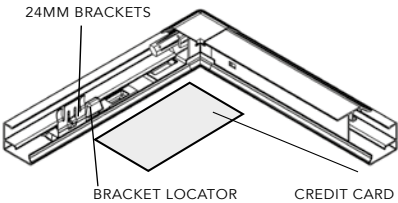

5. Clip the Perfect Fit frame to the installed universal frame

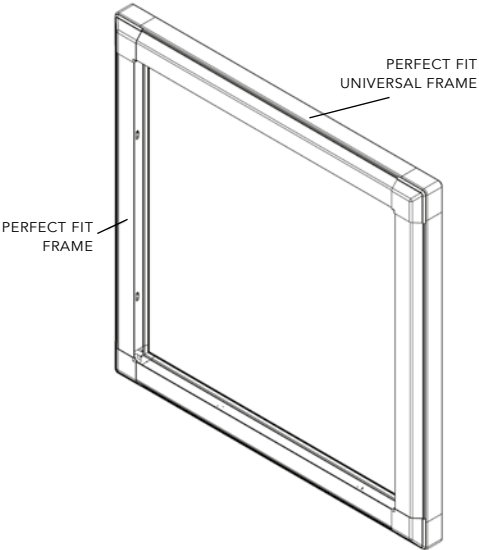

Visit the Louvolite website to view the links to all of our assembly instructional videos.